



Annex 8

Maintenance plan for an IVECO Daily 50C18H Euro VI D		
	Service "A"	Service "B"
	40000km	80000km
VEHICLE ON FLOOR		
Footbrake travel	Check/report	Check/report
Parking brake travel	Check/report	Check/adjust
ABS warning system	Check/report	Check/report
Instruments	Check/report	Check/report
Switches/controls	Check/report	Check/report
Cabin Filter	Renew	Renew
Heater blower	Check/report	Check/report
Horn	Check/report	Check/report
Interior lamps	Check/report	Check/report
Front wiper blades	Check/report	Check/report
Front screen wash	Check/report	Check/adjust
Instrument illumination	Check/report	Check/report
Direction indicators/hazards	Check/report	Check/report
Lighting system	Check/report	Check/report
Headlights	Check/report	Check/report
Body work/paint	Check/report	Check condition
VEHICLE FULLY RAISED		
Engine oil leaks	Check/report	Check/report
Engine oil	Drain/refill	Drain/refill
Engine oil filter	Renew	Renew
Clutch hydraulic system	Check/report	Check/report
Clutch clearance	Check/report	Check/adjust
Gearbox oil leaks	Check/report	Check/report
Gearbox oil	Check/report	Check/top-up
Transfer box oil	Check/report	Check/top-up
Steering knuckles, drag link, center arm and steering linkage grease	Lubricate	Lubricate
Steering joints	Lubricate	Lubricate
Steering rack/box	Check/report	Check/report
Steering column couplings	Check/report	Check/report
Suspension joints/seals/gaiters	Check/report	Check/report
Suspension joints	Check/report	Lubricate
Suspension mountings	Check/report	Check tightness
Propshaft splines including tightening of bolts	Check/report	Check/lubricate
Drive shaft joints/seals/gaiters	Check/report	Check/report
Rear differential oil leaks	Check/report	Check/report
Vehicle Half Raised		
Front brake pads	Check/report	Check/report
Front brake discs	Check/report	Check/report
Rear brake pads	Check/report	Check/report
Rear brake discs	Check/report	Check/report
Brake hydraulic system	Check/report	Check/report

Tyre condition (tread under 3 mm should be reported)	Check-report	Check/report
Tyre pressures	Check/adjust	Check/adjust
Wheel balance*	Check/adjust	Check/adjust
Engine Bay Operations		
Battery terminals	Clean/tighten/re-grease	Clean/tighten/re-grease
Washer bottle(s)	Check/top-up	Check/top-up
Brake fluid reservoir	Check/top-up	Check/top-up
Clutch fluid reservoir	Check/top-up	Check/top-up
Power steering fluid	Check/top-up	Check/top-up
Engine coolant level/anti-freeze strength	Check/adjust	Check/adjust
Coolant/heater hoses	Check/Report	Check/report
Air filter	Renew	Renew
Diesel fuel filter	Renew	Renew
Auxiliary drive belt/s	Check/adjust	Check/adjust
Final Items Check		
Vehicle locks/hinges	Check/lubricate	Check/lubricate
Headlamp alignment	Adjust	Check/adjust
Wheel alignment 4 points	Check/adjust	Check/adjust